


COMBI

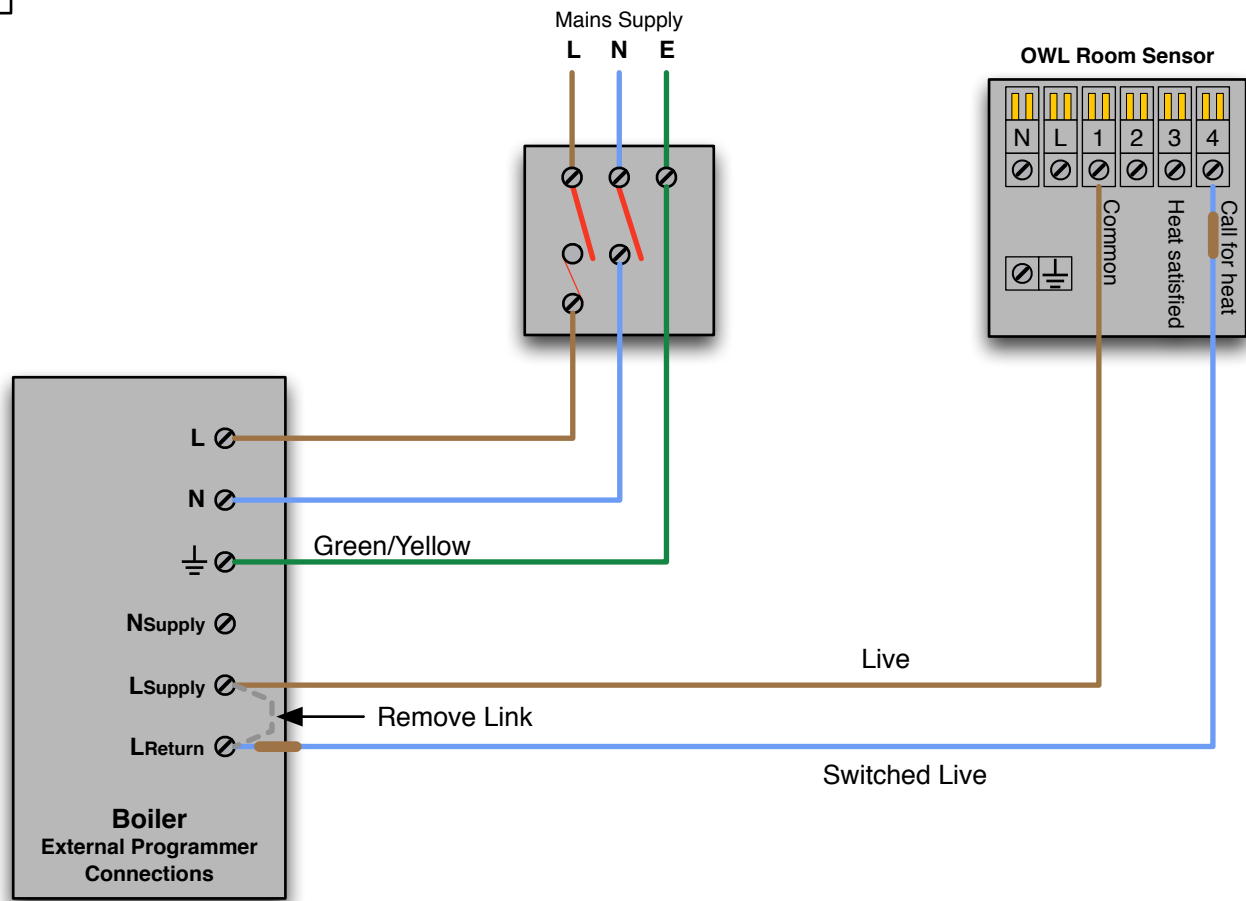


PLEASE NOTE: The battery powered Room Sensor has a safety switch fitted and will ONLY work correctly with the backplate supplied. This backplate operates the safety switch when correctly fitted.

For mains powered Room Sensor make these additional connections:

Description	Sensor Terminal
Live Supply	L
Neutral Supply	N



COMBI - WIRELESS

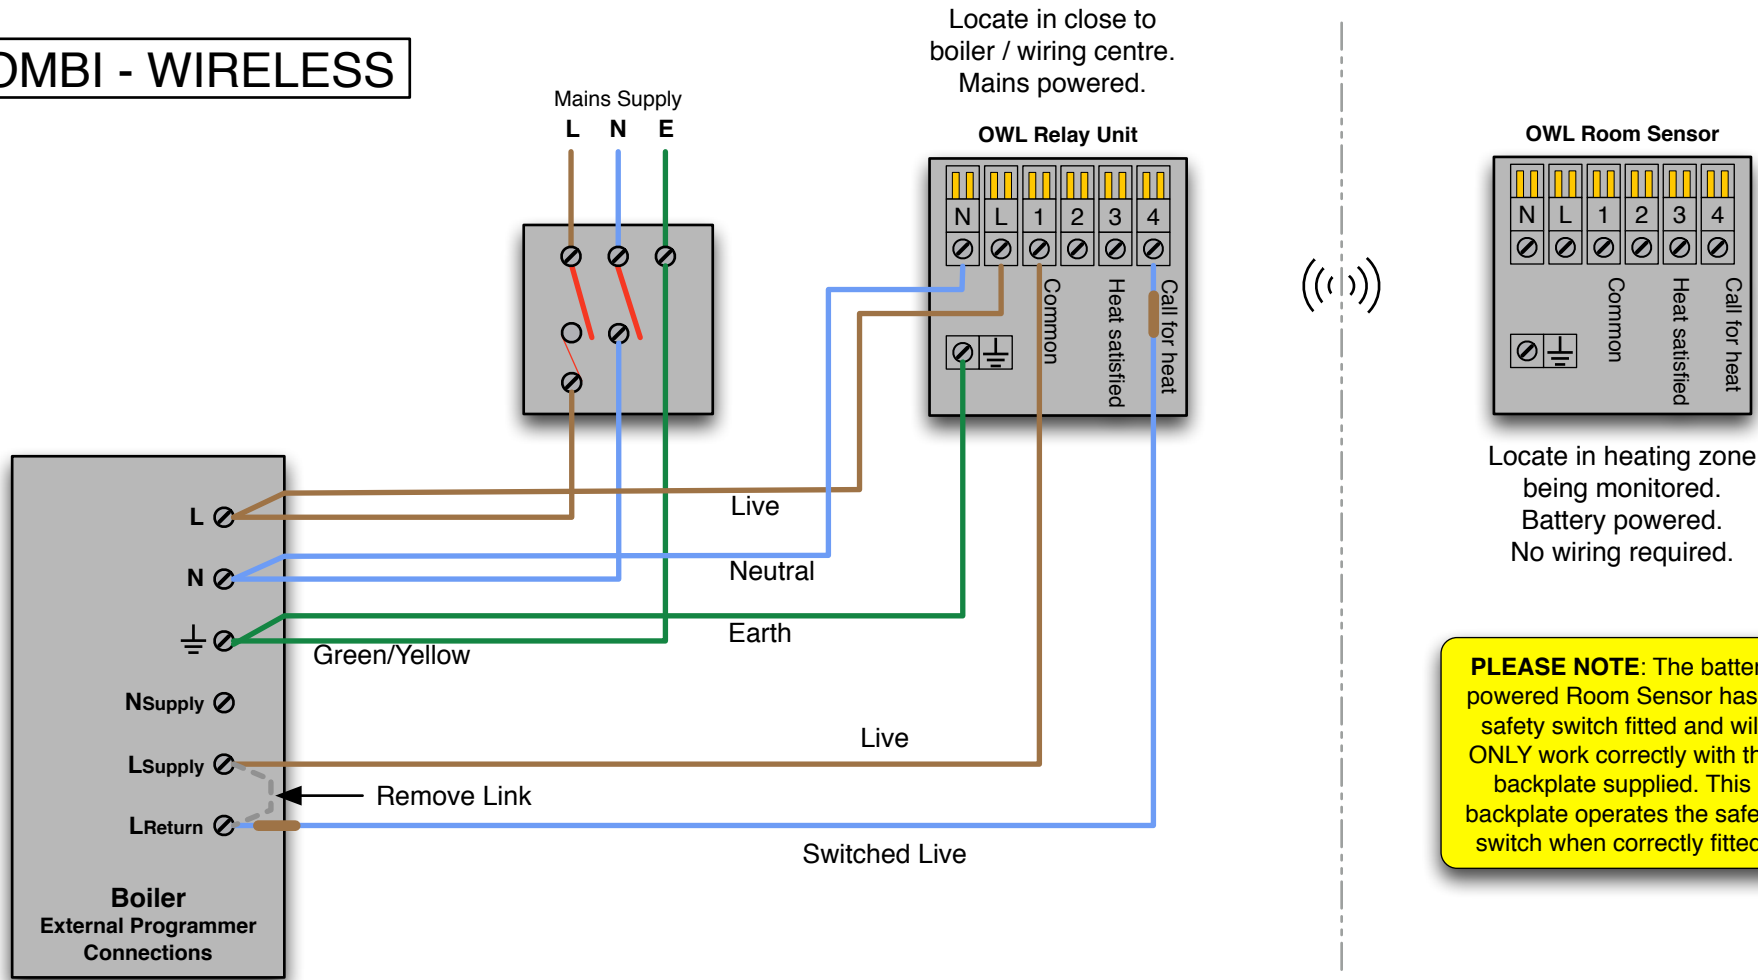



PLEASE NOTE: The battery powered Room Sensor has a safety switch fitted and will ONLY work correctly with the backplate supplied. This backplate operates the safety switch when correctly fitted.



'Y' PLAN



PLEASE NOTE: The battery powered Room & Tank Sensors have a safety switch fitted and will ONLY work correctly with the backplate supplied. This backplate operates the safety switch when correctly fitted.

HEATING

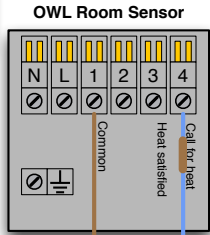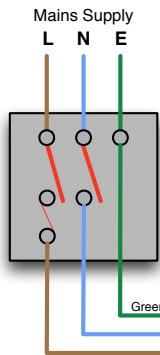



For mains powered Room Sensors make these additional connections:

Description	Wiring Centre Terminal	Sensor Terminal
Live Supply	1	L
Neutral Supply	2	N

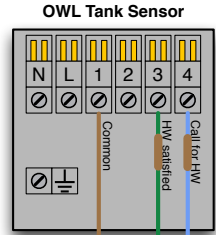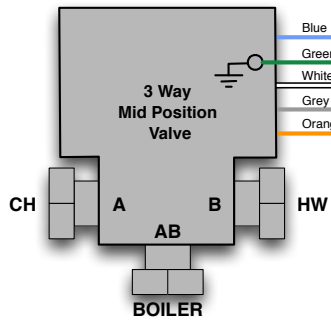



HOT WATER

PLEASE NOTE: For safety and convenience it is recommended that the original Tank / Cylinder Stat is retained in circuit. Leave old Stat set to the maximum temperature hot water you require (65°C).

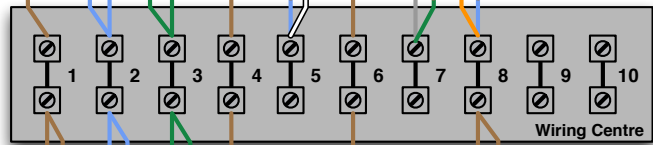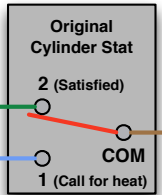

Link or set old programmer CH to always on

Link or set old programmer HW to always on





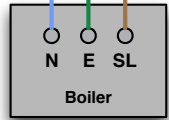
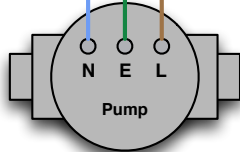


'S' PLAN

PLEASE NOTE: The battery powered Room & Tank Sensors have a safety switch fitted and will ONLY work correctly with the backplate supplied. This backplate operates the safety switch when correctly fitted.


HEATING

HOT WATER

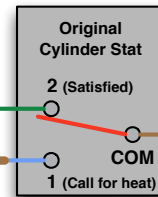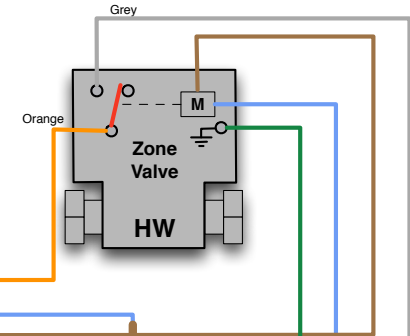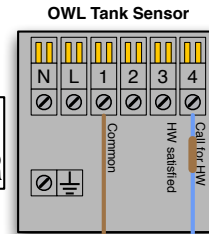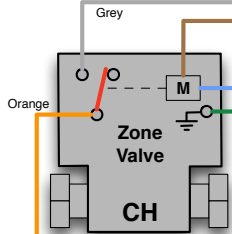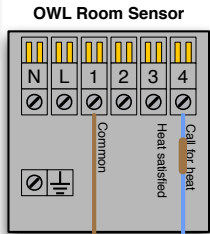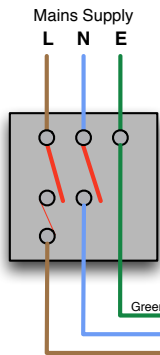

For mains powered Room Sensors make these additional connections:



Description	Wiring Centre Terminal	Sensor Terminal
Live Supply	1	L
Neutral Supply	2	N

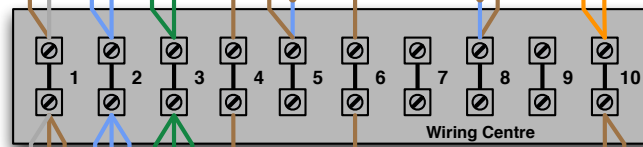

PLEASE NOTE: For safety and convenience it is recommended that the original Tank / Cylinder Stat is retained in circuit. Leave old Stat set to the maximum temperature hot water you require (65°C).

Link or set old programmer CH to always on


Link or set old programmer HW to always on

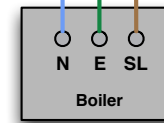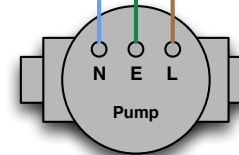

2 Zone + Hot Water

PLEASE NOTE: The battery powered Room & Tank Sensors have a safety switch fitted and will ONLY work correctly with the backplate supplied. This backplate operates the safety switch when correctly fitted.








PLEASE NOTE: For safety and convenience it is recommended that the original Tank / Cylinder Stat is retained in circuit. Leave old Stat set to the maximum temperature hot water you require (65°C).

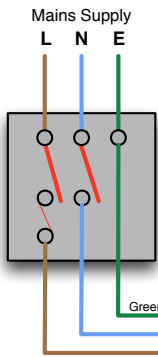

Zone 2


Zone 1

HW 1

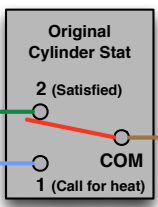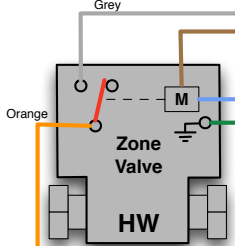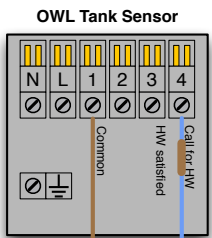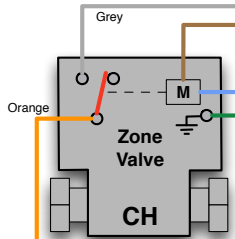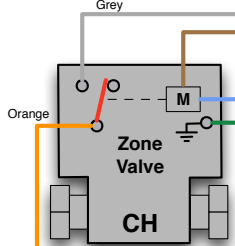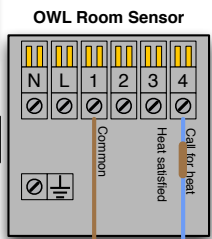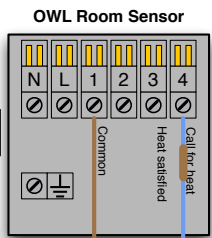

For mains powered Room Sensors make these additional connections:

Description	Wiring Centre Terminal	Sensor Terminal
Live Supply	1	L
Neutral Supply	2	N

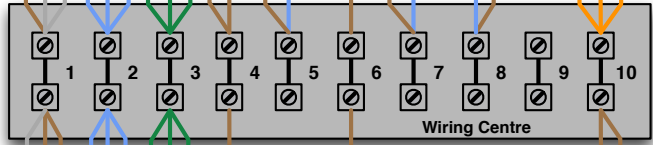

Link or set old programmer CH to always on

Link or set old programmer HW to always on

